
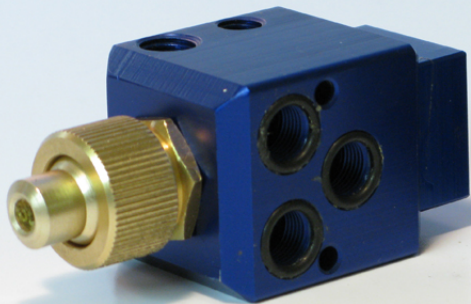


MOD. ABC

DESCRIZIONE DESCRIPTION

COD.

1 Corpo - Body (non disponibile-not available)	B-SA3000-GR
2 Fondello - End cap	B-XFS0012
3 Pistone - Piston (4-5-inclusi-enclused)	B-XPI0002
4 O-Ring 13,95x2,62 (3056)	B-OR0009
5 O-Ring 2,9x1,78 (2012) (x2)	B-OR0008
6 Testina completa-Complete head (12+13+14+15+16)	B-XTC....
7 Molla - Spring Ø 15,8	B-MOL0003
8 Vite fondello - End cap screw - M4x12 (x2)	B-VIT0030
9 Vite regolazione liquido - Liquid setting screw	B-VIT0074
10 Dado autobloccante - Self-locking nut	B-DAD0006
11 Kit O-Rings (4+5+10+12+13+17)	B-XKI0023
12 O-Ring 13,1x2,62 (117)	B-OR0002
13 O-Ring 11,11x1,78 (114)	B-OR0017
14 Porta Jet 1/4(Nipplo) - Nozzle soached 1/4	B-XPJ0002
15 Jet (MX3-external mixing) (P-V-M-Snorky- Internal mixing)	B-XJE....
16 Ghiera porta Jet - Jet cap nut	B-GHI0002
17 O-Ring 9,25x1,78 (O-Ring 2037) (x3)	B-OR0022
18 Camozzi 6512 3-M5	B-RAC0024
19 Tubo Rilsan - Rilsan Pipe Ø 3	B-TUB0014
20 Morsetti snodobracci-Universal Mount Bracket (OPTIONAL)	B-XMS0003

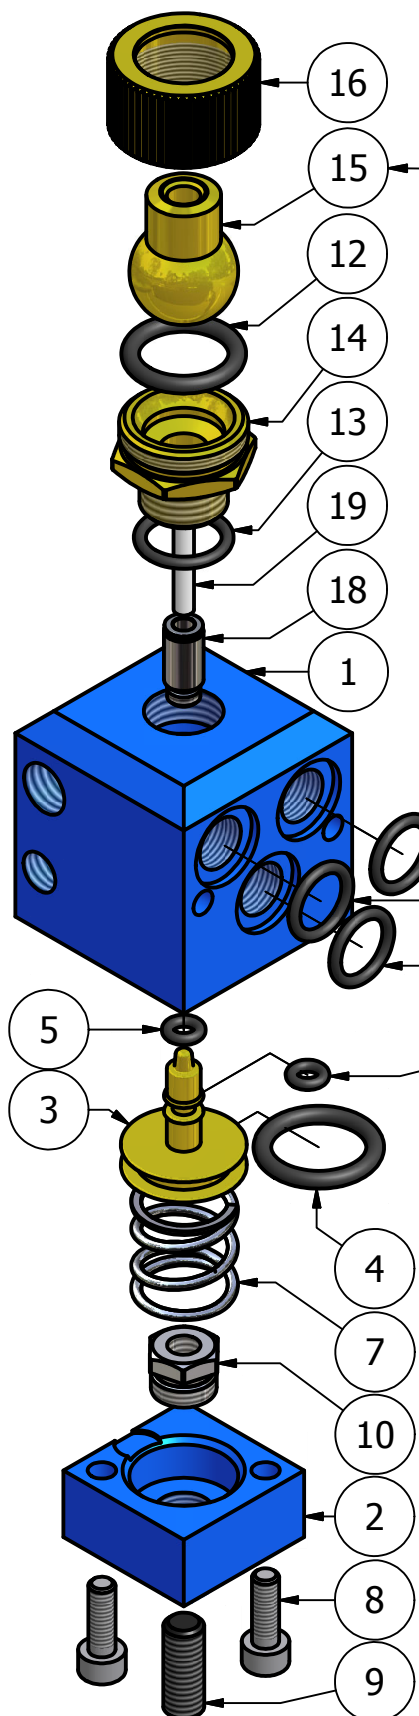

EXTERNAL MIX (JET MX3)




Cod. : B-XJE0401

Pressioni Pressures
(AIR LIQ. independent setting)


Liq. Press. 0,5 - 1 bar

Air Press. 4-8 bar

(Pil. 4-8 bar)

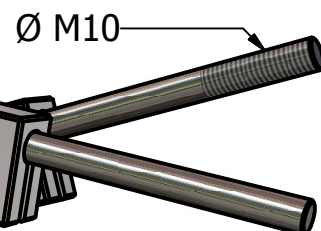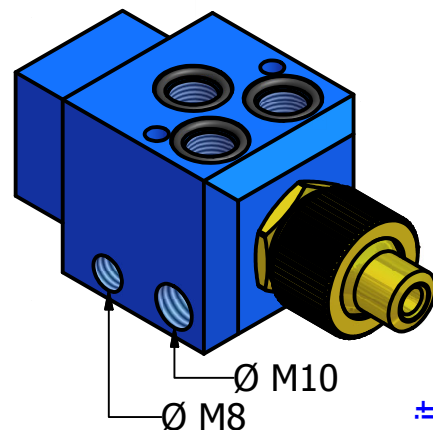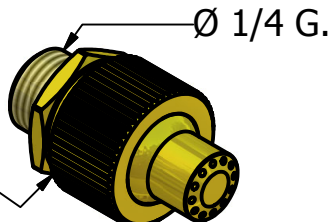

Sostituire ogni 3-6 mesi
Replace every 3-6 month

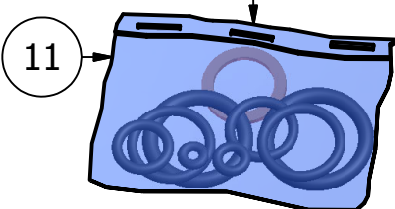

INTERN.MIX
Esempio pressioni utilizzo
Working pressure examples:
LIQ. 4 bar-AIR 5 bar
LIQ. 5 bar-AIR 6 bar
LIQ. 6 bar-AIR 7 bar
LIQ. 7 bar-AIR 8 bar

J E T S I N T E R N A L M I X I N G



COD. : B-XJE0703 B-XJE0301 B-XJE0302 B-XJE0303 B-XJE0201 B-XJE0103 B-XJE0101